


KEE Printhead Display



KGE Printhead Display



KKE Printhead Display

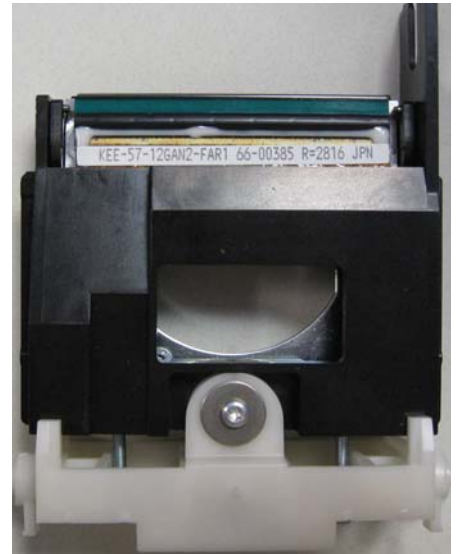

Printer Label Display

The Printhead type is also located on the Printer label. (**Note:** On KEE Printers, Fargo does not put KEE on the inspection label on the back of Printers. It is only found on the Printhead itself.)

